

Series 884 Digital Time Clock: Setting Instructions


This time clock provides flexible timing for daily and/or weekly programming. Setting the 884 is simple and fast by means of push buttons and display prompts. This timer combines 24 hour/7 day timing. Up to 8 on/off operations are allowed for each day for a total of up to 56 switching cycles per week.

Minimum time setting is 1 minute.

A lithium battery provides 5 year backup.

Note: To save time, you can set up each on/off cycle;

- A) to be unique for each individual day, or
- B) for Monday to Friday (days 1 to 5), or
- C) for weekends only (days 6 & 7), or
- D) for all days except Sunday (days 1 to 6) , or
- E) the entire week at one time. This can save a lot of time when programming the "on" and "off" cycles.

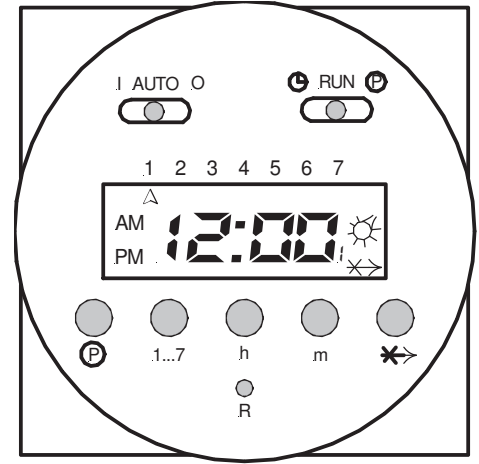

Directions:

- Slide the **RUN** switch to **P**.
- Press the **1...7** button seven times and notice a single arrow will move in steps below the 1-7 numbers, indicating the individual days of the week.
- The next time you press the button, you will see days 1 to 5 highlighted with arrows (Monday to Friday).
 - The next time you press **1...7**, you will see arrows highlighting 6 and 7 (weekends).
 - The next time you press **1...7**, you will see arrows highlighting all days except Sunday
 - The next time you press **1...7**, you will see arrows highlighting all days of the week.

#1: Setting the current time and current day

- Slide **RUN** switch to left symbol of clock face.
- Press the **1...7** button until the arrow points to the current day (1=Monday, 2=Tuesday, etc.).
- Press the **"h"** then **"m"** buttons to set the current time. The **"PM"** indicator shows noon to 11:59 p.m.
- Slide **RUN** switch to "run." The clock colon will blink between the hours and minutes.

#2: Setting each cycle to "switch on"

- Slide the **RUN** switch to **P**. A "1" indicates this is the first switch cycle and a "bulb" icon indicates a switch on condition (circuit closes). **NOTE: Odd numbers indicate a "switch-on" cycle.**
- Press the **1...7** button until the arrows point to the selected day(s) you want this ON cycle to occur. See "Note" above instructing how to choose days of the week.
- Press the **"h"** then **"m"** buttons to show switch-on time, noting the **"PM"** indicator.



ENGINEERING YOUR SUCCESS.

Series 884 Digital Time Clock: Setting Instructions Continued

#3: Setting each cycle to “switch off”

- Slide **RUN** switch to **P**. Press the “**p**” button. The switch cycle number changes to 2 and the bulb blinks, indicating switch-off (circuit opens). **Note:** *Even numbers indicate a “switch-off” cycle.*
- Press the **1...7** button until arrows point to the selected day(s) you want the OFF cycle to occur.
- Press the “**h**” then “**m**” buttons to select switch-off time.
 - * *Remember you can repeat the above steps to program up to 8 on/off events for each day of the week. By pressing the lower “**P**” button you can advance to the desired on/off cycle.*
- Slide **RUN** switch to “run.” The clock colon will blink.

#4: Autorun mode

- Set time and day and desired switch cycles.
- Slide set switch to **RUN** and mode switch to **AUTO**. Switching will begin with the next switch-on set time.

#5: To switch the override ON

- Slide mode switch to **I**. The switch remains on indefinitely (circuit closed).

#6: To switch the override OFF

- Slide mode switch to **0**. The switch remains off indefinitely (circuit open).

#7: Skip cycle

- In automatic run mode, press the “**X—>**” button. The next program is skipped.

#8: Setting error

- If **EEE** appears, a setting error exists. The switch cycle number in error is shown.
- Slide set switch to **P**. Press button until cycle is shown. Review this and the following setting to correct error.
- Slide set switch to **RUN**.

#9: Clear any setting

- Slide the **RUN** switch to **P**. Press the lower **P** button to show the switch cycle that you want to clear.
- Press the **1...7** button until no days are indicated. Repeat for the following switch cycle.
 - This on/off cycle is now inactive.

#10: Clear all

To erase all settings, press **R**.



ENGINEERING YOUR SUCCESS.